
2S warning signals

INSTRUCTION & SERVICE MANUAL D2xS1 ALARM HORN

For Use In Hazardous Locations

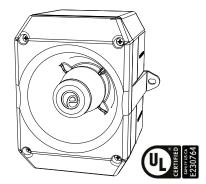

1) Introduction

The D2xS1 is an ATEX, IECEx and UL certified alarm horn which produces a loud warning signal in a hazardous area. Sixty-Four first stage alarm sounds can be selected by internal switches and each one can be externally changed to a second, third or fourth stage alarm sound. The alarm horn may be used for Gas applications in Zone 2 / Class I Zone 2 / Class I, Division 2 as well as for Dust applications in Zone 22 / Class II Zone 22 / Class II Division 2 / Class III Division 1 & 2. A D2xC1 combined alarm horn & strobe is also available. The 24Vdc version is also listed for use in fire alarm systems – public mode in accordance with UL464 Tenth Edition / CAN/ULC-S525 Fourth Edition.

2) Warnings

SUITABLE FOR USE IN CLASS II, DIVISION 2, GROUPS A, B, C AND D HAZARDOUS LOCATIONS

SUITABLE FOR USE IN CLASS II, DIVISION 2, GROUPS E, F AND G HAZARDOUS LOCATIONS

WARNING: DO NOT OPEN WHEN EXPLOSIVE ATMOSPHERE IS PRESENT

WARNING – EXPLOSION HAZARD – SUBSTITUTION OF ANY COMPONENT MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2. WARNING – EXPLOSION HAZARD – SUBSTITUTION OF ANY COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS II, DIVISION 2

POTENTIAL ELECTROSTATIC CHARGING HAZARD – CLEAN ONLY WITH A DAMP CLOTH

USE HEAT RESISTANT CABLES AND CABLE GLANDS (RATED 90°C OR HIGHER)

EXPLOSION HAZARD. DO NOT REMOVE OR REPLACE LAMPS, FUSES OR PLUG-IN MODULES UNLESS POWER HAS BEEN DISCONNECTED OR THE AREA IS KNOWN TO BE FREE OF IGNITIBLE CONCENTRATIONS OF FLAMMABLE GASES OR VAPORS.

EXPLOSION HAZARD. DO NOT DISCONNECT WHILE THE CIRCUIT IS LIVE OR UNLESS THE AREA IS KNOWN TO BE FREE OF IGNITIBLE CONCENTRATIONS.

DO NOT PAINT

NE PAS PEINTURER

3) Ratings and Markings

3.1 ATEX / IECEx certification

The D2xS1 alarm horn complies with the following standards:-

EN60079-0:2012 / IEC60079-0: ed. 6.0 (2011-06) EN60079-15:2010 / IEC60079-15: ed. 4.0 (2010-01) EN60079-31:2009 / IEC60079-31:2009 ed. 1.0 (corr. 1 2009)

The Type Examination Certificate DEMKO 14ATEX4786493904X / IECEx ULD14.0004X has been issued by UL. This confirms compliance with the European ATEX

Directive 94/9/EC for Group II, Category 3G/D equipment. The alarm horn carries the Community Mark and subject to local codes of practice, may be installed in any of the EEA member countries. This instruction sheet describes installations which conform to the current issue of EN60079-14/IEC60079-14 Electrical Installation in Hazardous Areas; EN60079-10-1 / IEC 60079-10-1 Explosive Atmospheres - Classification of Areas. Explosive Gas Atmospheres; EN60079-10-2 / IEC 60079-10-2 Explosive Atmospheres - Classification of Areas. Explosive Dust Atmospheres. When designing systems for installation outside the UK, the local Code of Practice should be consulted.

The D2X Alarm horn is rated as follows:



II 3G Ex nA IIC T4 Gc (Ta -40°C to +50°C)
II 3D Ex tc IIIC T90°C Dc (Ta -40°C to +50°C)

CE Marking



Zones, Gas / Dust Groups and Temperature Classification

When connected to an approved system the D2X alarm horn may be installed in:

Zone 2 explosive gas air mixture not likely to occur in normal operation, and if it does, it will only exist for a short time.

Zone 22 explosive dust air mixture not likely to occur in normal operation, and if it does, it will only exist for a short time.

May be used with gases in groups:

Group IIA propane Group IIB ethylene

Group IIC hydrogen / acetylene

Having a temperature classification (for Gas applications) of:

T1 450°C T2 300°C T3 200°C T4 135°C

May be used with Dust types:

Group IIIA combustible flyings Group IIIB non-conductive dust Group IIIC conductive dust

Maximum Surface Temperature for Dust Applications:

9000

3.2 Class / Zone ratings US

The D2xS1 alarm horn complies with the following standards:

ANSI/UL 60079-0-2013 ANSI/UL60079-15-2013 ISA60079-31-2013

The D2X Alarm horn is rated as follows:

Class I, Zone 2 AEx nA IIC T4 Gc (Ta -40°C to +50°C) Zone 22 AEx tc IIIC T90°C Dc (Ta -40°C to +50°C)

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH

sales@e-2-s.com www.e-2-s.com Tel: +44 (0)208 743 8880 Fax: +44 (0)208 740 4200 Installation must be carried out in compliance with the National Electric Code.

3.3 Class / Zone ratings Canada

The D2xS1 alarm horn complies with the following standards:

CAN/CSA C22.2 No. 60079-0:11 CAN/CSA C22.2 No. 60079-15:12 CAN/CSA C22.2 No. 60079-31:12

The D2XS1 Alarm horn is rated as follows:

Ex nA IIC T4 Gc X (Ta -40°C to +50°C) Ex tc IIIC T90°C Dc (Ta -40°C to +50°C) Class II Div 2 EFG T5 (Ta -40°C to +50°C)

Installation must be carried out in compliance with the Canadian Electric Code

3.4 Class / Division Ratings for US and Canada

The D2xS1 alarm horn complies with the following standards:-

ANSI/ISA 12.12.01-2013 CSA C22.2 No. 213-M1987 CSA C22.2 No. 157-92:2006

The D2XS1 Alarm horn is rated as follows:

Class I Div 2	ABCD T3C	Ta -40°C to +70°C
Class I Div 2	ABCD T4	Ta -40°C to +65°C
Class I Div 2	ABCD T4A	Ta -40°C to +50°C
Class II Div 2	FG T5	Ta -40°C to +50°C
Class II Div 2	FG T6	Ta -40°C to +45°C
Class III Div 1 & 2		Ta -40°C to +50°C

Installation must be carried out in compliance with the National Electric Code / Canadian Electric Code

3.5 Ambient Temperature Range:

-40°C to +70°C (Class I Div 2 only) -40°C to +50°C

3.6 Ingress Protection Ratings

The product is rated for ingress Protection as follows: IP rating per EN60529: **IP66**

Type rating per UL50E / NEMA250: 4 / 4X / 3R / 13

To maintain the ingress protection rating, the two off M20 cable entries must be fitted with suitably rated, certified cable entry and/or blanking devices during installation.

3.7 Electrical Ratings

Part No.	Nominal Voltage	Nominal Current	Voltage Range	Max Current
D2xS1DC024	24Vdc	313mA	10-30Vdc	313mA @ 24Vdc
D2xS1DC048	48Vdc	181mA	38-58Vdc	218mA @ 48Vdc
D2xS1AC115	115Vac	89mA	115Vac +/-10% 60Hz	91mA @ 126.5Vac
D2xS1AC230	230Vac	52mA	230Vac +/-10% 50Hz	72mA @ 253Vac

3.8 Fire Alarm Ratings

The following model is approved for use as an audible signal appliance for fire alarm use - public mode (UL464) and produces a sound pressure level above 75dB(A) at 10 feet:

D2xS1DC024

For Fire Alarm applications, the Sounder Volume must be at the highest setting, (see volume control section).

For fire alarm use, the temporal pattern tone No. 12 as per the tone table provided in these instructions must be selected. This tone produces a minimum sound pressure level of:

CAN/ULC-S525: 100.4dB(A)* at 10 feet. (*anechoic room) UL464: 92.2dB(A)† at 10 feet. (†reverberation room)

Special Conditions for Safe Use

Special Condition for safe Use as stated on the Type Examination Certificate DEMKO 14 ATEX 4786493904X / CoC IECEx ULD 14.0004X:

End user shall adhere to the manufacturer's installation and instruction when performing housekeeping to avoid the potential for hazardous electrostatic charger during cleaning, by using a damp cloth.

The D2xS1 is not to be mounted with the horn facing upwards The equipment shall only be used in end use with appropriately certified cable entry devices and blanking plugs

4.1 Installation

The product must only be installed by suitably qualified personnel in accordance with the latest issues of the relevant standards.

The installation of the units must also be in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer who has the necessary training.

The alarm horn is not to be mounted with the horn facing upwards.

The equipment has not been assessed as a safety-related device (as referred to by Directive 94/9/EC Annex II, clause 1.5).

The cable entry temperature may exceed +70°C / the cable branching point may exceed 80°C. Therefore suitable heat resisting cables and cable glands must be used, with a rated service temperature of at least 90°C.

To maintain the ingress protection rating and mode of protection, the M20 x 1.5 cable entries must be fitted with suitably rated, certified cable glands and/or suitably rated, certified blanking devices during installation. If a high IP (Ingress Protection) rating is required then a suitable sealing washer must be fitted under the cable gland. For use in explosive gas atmospheres a minimum ingress protection rating of IP54 must be maintained. For use in explosive dust atmospheres a minimum ingress protection rating of IP64 must be maintained.

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH

sales@e-2-s.com

Tel: +44 (0)208 743 8880 Fax: +44 (0)208 740 4200 www.e-2-s.com

Only the front cover is to be used for access to the enclosure for installation, service and maintenance. Once the product is opened, the Type Rating cannot be maintained anymore unless a full verification of the gasket material is done and there is no damage.

Connections are to be made into the terminal blocks using solid or stranded wire, sizes 0.5-2.5mm2 / AWG 20-14. Wire insulation needs to be stripped 6-7mm. Wires may be fitted securely with crimped ferrules. Terminal screws need to be tightened down with a tightening torque of 0.56 Nm / 5 Lb-in. Internal earthing connections should be made to the Internal earth terminal on the PCBA. The earth conductor should be at least equal in size and rating to the incoming power conductors. The internal earth bonding wire connects the PCBA earth terminal to the internal earth terminal in the enclosure back box.

External earthing connections should be made to the M5 earth stud, using a ring crimp terminal to secure the earth conductor to the earth stud. The external earth conductor should be at least 4mm² / AWG 11 in size.

Check that the earth bonding wire between the two castings is secure and the 'O' ring seal is in place and in good condition.

4.2 Maintenance, Repair and Overhaul

Maintenance, repair and overhaul of the equipment should only be carried out by suitably qualified personnel in accordance with the current relevant standards:

EN60079-19 / IEC60079-19 Explosive atmospheres - Equipment repair, overhaul and reclamation EN 60079-17 / IEC60079-17 Explosive atmospheres -

Electrical installations inspection and maintenance

Units must not be opened while an explosive atmosphere is present.

If opening the unit during maintenance operations a clean environment must be maintained and any dust layer removed prior to opening the unit.

Electrostatic charging hazard - Clean only with a damp cloth

5) Installation

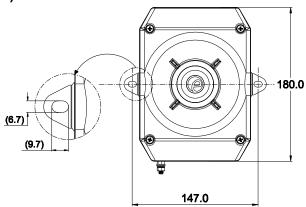


Fig. 1 Fixing locations.

D2xS1 alarm horn should only be installed by trained competent personnel.

5.1 Mounting

The D2xS1 alarm horn may be secured to any flat surface using the two 9.7 x 6.7mm, 147mm pitch fixing holes. The


enclosure provides IP66 protection and is suitable for installation in exterior locations providing it is positioned so that water cannot collect in the horn, and the cable entry is sealed.

5.2 Installation procedure

- Remove Secure the D2xS1 alarm horn to a flat surface via the two 9.7 x 6.7mm, 147mm pitch fixing holes in the mounting feet.
- b) Remove the front of the alarm horn by unscrewing the four captive cover screws and pulling the front away from the enclosure.
- c) Fit an M20x1.5 suitably rated, certified cable gland or conduit entry into the hole in the enclosure and connect the field wiring to the appropriate alarm horn terminals as shown in section 9 and fig 8 (DC) or section 8 fig 5 (AC) of this manual. The power supply terminals are duplicated so that alarm horns may be connected in parallel and for DC units only an end of line monitoring resistor may be fitted. If the second M20x1.5 entry is not used a suitably rated, certified stopping plug must always be fitted.
- d) Select the required output tone by positioning the six switches as shown in Table 1 and Fig 2.
- e) Adjust the internal volume control to provide the required sound level. (Refer to section 6)
- f) Check that the O-ring seal in the front cover is in good condition and not damaged.
- Replace the front of the alarm horn and tighten the four captive cover screws.

6) Volume Control

The output level of the D2xS1 alarm horn can be set by adjusting the volume control potentiometer (see Fig 2). For maximum output, set the potentiometer fully clockwise.

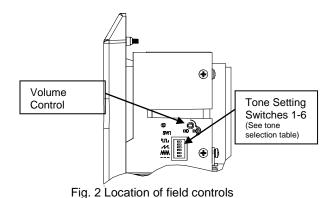


sales@e-2-s.com Tel: +44 (0)208 743 8880 www.e-2-s.com Fax: +44 (0)208 740 4200

7) Cable Routing and Tone Selection

7.1 Cable Routing

Due to the compact design of the D2x units, it is important that the user strips off the outer sheath and biases any cables over the size of 1mm² as shown below.

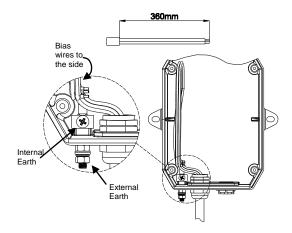

^{*}Glands and/or stopping plugs to be customer supplied to suit application.

Fig 3. Cables are to be stripped and biased toward side of unit with allocated spacing as shown.

7.2 Tone Selection

The D2xS1 alarm horns have 64 different tones. The tones are selected by operation of the tone setting DIP switches (see Fig. 2) on the PCB. The alarm horns can also be switched to sound the second, third and fourth stage alarm tones. The tone table (Table 1) shows the switch positions for the 64 tone and which tones are available for the second, third and fourth stages.

8) AC Wiring

8.1 Wiring Diagram

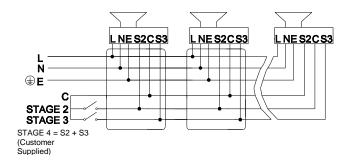


Fig 4. AC Simplified Block Diagram

8.2 Unit's First Stage Tones

Document No. D189-00-001-IS

Stage one (S1) operation: Simply connect the supply voltage to the L and N supply terminals, (see fig. 5).

8.3 AC Units Second, Third and Fourth Stage Tone Selection

To select the second, third and fourth stage tones on the D2xS1 AC alarm horns.

Stage two (S2) operation: Power L and N, link the common (C) and S2 terminal.

Stage three (S3) operation: Power L and N, link the common (C) and S3 terminals.

Stage four (S4) operation: Power L and N, link the common (C) and both the S2 and S3 terminals.

Issue: 10

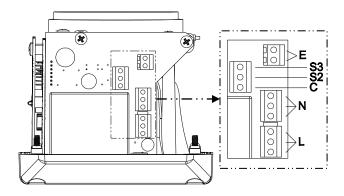


Fig. 5 AC Terminals

9) DC Wiring

9.1 DC Stage Polarity Control

The stage switches of the DC powered D2x units can be activated via Positive (+ve) or Negative (-ve) switching. All units are factory set to -ve switching as standard. If +ve switching is required, the two wire links should be removed from the '-' positions of the stage polarity control terminals and fitted to the '+' positions as shown in fig 6.

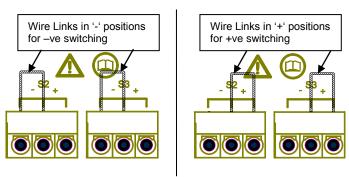


Fig. 6 Stage Polarity Control settings.

9.2 Wiring Diagrams

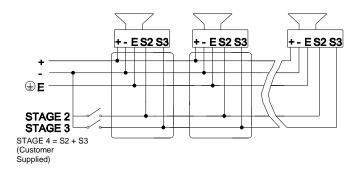


Fig. 7a DC Simplified Block Diagram (negative switching)

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH sales@e-2-s.com www.e-2-s.com www.e-2-s.com Fax: +44 (0)208 743 8880

04-12-19 Sheet 4 of 7

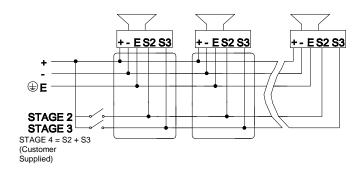


Fig. 7b DC Simplified Block Diagram (positive switching)

9.3 Unit's First Stage Tones

Stage one (S1) operation: Simply connect the supply voltage to the + and - supply terminals, (see fig. 8).

9.4 DC Units Second, Third and Fourth Stage Tone Selection

For units set up for -ve switching (default setting):

Stage two (S2) operation: Power +ve and –ve, link a -ve supply line to the S2 terminal.

Stage three (S3) operation: Power +ve and -ve, link a -ve supply line to the S3 terminal.

Stage four (S4) operation: Power +ve and -ve, link a -ve supply line to both the S2 & S3 terminals.

For units set up for +ve switching (refer to 9.1):

Stage two (S2) operation: Power +ve and -ve, link a +ve supply line to the S2 terminal.

Stage three (S3) operation: Power +ve and -ve, link a +ve supply line to the S3 terminal.

Stage four (S4) operation: Power +ve and -ve, link a +ve supply line to both the S2 & S3 terminals.

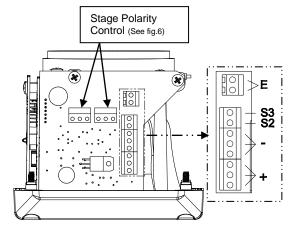


Fig. 8 DC Terminals

10) Earthing

Document No. D189-00-001-IS

The unit has both internal and external earth terminals, (please see fig 3).

Internal earthing connections should be made to the internal earth terminal on the PCBA, (please see fig 8 for DC, fig 5 for AC). The earth conductor should be at least equal in size and rating to the incoming power conductors. The internal earth bonding wire connects the PCBA earth terminal to the internal earth terminal in the enclosure back box.

Issue: 10

External earth connections should be made to the M5 earth stud, using a ring crimp terminal to secure the earth conductor to the earth stud. The external earth conductor should be at least 4mm² in size. The external earth crimp ring should be located between the two M5 plain washers provided and securely locked down with the M5 spring washer and M5 nut.

11) End Of Line Monitoring (DC Units Only)

On D2xS1 DC units, dc reverse line monitoring can be used if required. All DC alarm horns have a blocking diode fitted in their supply input lines. An end of line monitoring resistor can be connected across the +ve and –ve terminals. If an end of line resistor is used it must have the following values:-

24V DC Alarm horns

Minimum Resistance 3k9 ohms
Minimum Resistance 1k ohms
Minimum wattage 0.5W
Minimum wattage 2.0W

48V DC Alarm horns

Minimum Resistance 15k ohms
Minimum Resistance 3k9 ohms
Minimum wattage 0.5W
Minimum wattage 2.0W

The resistor must be connected directly across the +ve and – ve terminals as shown in the following drawing. Whilst keeping its leads as short as possible, a spacing of at least 1/16 inch (1.58mm) must be provided through air and over surfaces between uninsulated live parts.

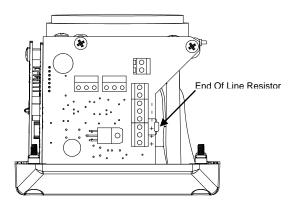


Fig. 9 End Of Line Resistor

12) Sound Directional Characteristics for Canadian Fire CAN/ULC-S525

Horizontal Axis

Angle	OSPL	Angle	OSPL
Reference (90°)	101.2dB(A)	Reference (90°)	101.2dB(A)
115°	-3dB(A)	68°	-3 dB(A)
129°	-6dB(A)	55°	-6 dB(A)
180°	92.4dB(A)	0°	92.4

Vertical Axis

Sheet 5 of 7

Angle	OSPL	Angle	OSPL
Reference	101.5dB(A)	Reference	101.5dB(A)
(90°)		(90°)	
123°	-3 dB(A)	65°	-3 dB(A)
137°	-6 dB(A)	50°	-6 dB(A)
180°	91 dB(A)	0°	88.5 dB(A)

04-12-19

Tone Sel which 2 nd , 3 ^l	ection – To select the required and 4th stage tones are available	first stage tone set the tone switches 1 to 6 (see Fig 2) to the tone set e for use with the selected first stage tone if more than one tone output	ting shown in the tab t stage is required.			
Stage 1 Tone No	Tone Description	Tone Visual	Switch Settings 1 2 3 4 5 6	Stage 2 Tone (S2)	Stage 3 Tone (S3)	Stage 4 Tone (S2 + S3)
1	1000Hz PFEER Toxic Gas	1000Hz	000000	3	2	44
2	1200/500Hz @ 1Hz DIN / PFEER P.T.A.P.	1200Hz 500Hz 1s	100000	1	3	44
3	1000Hz @ 0.5Hz(1s on, 1s off) PFEER Gen. Alarm	1000Hz 1s	010000	1	2	44
4	1.4KHz-1.6KHz 1s, 1.6KHz- 1.4KHz 0.5s NF C 48-265	1600Hz 0.5s	110000	44	24	1
5	544Hz(100mS)/440Hz (400mS) NF S 32-001	544Hz 0.1s 440Hz 0.4s	001000	52	19	1
6	1500/500Hz - (0.5s on , 0.5s off) x3 + 1s gap AS4428	1500Hz 0.5s 0.5s 0.5s 0.5s 1.5s	101000	7	44	1
7	500-1500Hz Sweeping 2 sec on 1 sec off AS4428	1500Hz 2s 1s	011000	6	44	1
8	500/1200Hz @ 0.26Hz(3.3s on, 0.5s off) Netherlands - NEN 2575	1200Hz 500Hz 3.3s 0.5s	111000	44	24	35
9	1000Hz (1s on, 1s off)x7 + (7s on, 1s off) IMO Code 1a	1000Hz 1s 1s 1s 1s 1s 7s -	000100	18	34	1
10	1000Hz (1s on, 1s off)x7 + (7s on, 1s off) IMO Code 1a	1s 1s 1s 1s 1s 1s 7s	100100	21	34	1
11	420Hz(0.5s on, 0.5s off)x3 + 1s gap ISO 8201 Temporal Pattern	420Hz 0.5s 0.5s 0.5s 1.5s	010100	44	1	8
12	1000Hz(0.5s on, 0.5s off)x3 + 1s gap ISO 8201 Temporal Pattern	1000Hz 0.5s 0.5s 0.5s 1.5s	110100	44	1	8
13	422/775Hz - (0.85 on, 0.5 off) x3 + 1s gap NFPA - Temporal Coded	775Hz 422Hz 0.85s 0.5s 0.85s 0.5s 1.5s	001100	44	1	8
14	1000/2000Hz @ 1Hz Singapore	2000Hz 1000Hz 1s	101100	23	3	35
15	300Hz Continuous	300Hz	011100	44	24	35
16	440Hz Continuous	440Hz ————	111100	44	24	35
17	470Hz Continuous	470Hz ————	000010	44	24	35
18	500Hz Continuous IMO code 2 (Low)	500Hz ———	100010	44	24	35
19	554Hz Continuous	554Hz	010010	64	24	35
20	660Hz Continuous	660Hz ————	110010	44	24	35
21	800Hz IMO code 2 (High)	800Hz ———	001010	44	24	35
22	1200Hz Continuous	1200Hz ————	101010	44	24	35
23	2000Hz Continuous	2000Hz	011010	15	3	35
24	2400Hz Continuous	2400Hz ———	111010	48	20	35
25	440 @0.83Hz (50 cycles/minute) Intermittent	440Hz 0.6s 0.6s	000110	1	44	8
26	470 @0.9Hz - 1.1s Intermittent	470Hz 0.55s 0.55s	100110	1	44	8
27	470Hz @5Hz - (5 cycles/second) Intermittent	470Hz 0.1s 0.1s	010110	1	44	8
28	544Hz @ 1.14Hz - 0.875s Intermittent	470Hz 0.43s 0.44s	110110	44	24	8
29	655Hz @ 0.875Hz Intermittent	655Hz 0.57s 0.57s	001110	1	44	8
30	660Hz @0.28Hz - 1.8sec on, 1.8sec off Intermittent	660Hz 1.8s 1.8s	101110	44	24	8
31	660Hz @3.34Hz - 150mS on, 150mS off Intermittent	660Hz 0.15s 0.15s	011110	30	24	8

European Safety Systems Ltd. Impress House, Mansell Road, Acton, London W3 7QH

sales@e-2-s.com www.e-2-s.com Tel: +44 (0)208 743 8880 Fax: +44 (0)208 740 4200

	1		1		ı	
32	745Hz @ 1Hz Intermittent	745Hz 0.5s 0.5s	111110	44	24	8
33	800Hz - 0.25sec on, 1 sec off Intermittent	800Hz 0.25s 1s	000001	53	24	8
34	800Hz @ 2Hz IMO code 3.a (High) Intermittent	800Hz 0.25s 0.25s	100001	56	24	8
35	1000Hz @ 1Hz Intermittent	1000Hz 0.5s 0.5s	010001	44	24	8
36	2400Hz @ 1Hz Intermittent	2400Hz 0.5s 0.5s	110001	21	24	8
37	2900Hz @ 5Hz Intermittent	2900Hz 0.1s 0.1s	001001	53	24	8
38	363/518Hz @ 1Hz Alternating	518Hz 0.5s 0.5s	101001	1	8	19
39		500Hz 0.25s 450Hz 0.25s	011001	1	8	19
40	450/500Hz @ 2Hz Alternating	554Hz 0.5s 440Hz 0.5s	111001	44	24	19
41	554/440Hz @ 1Hz Alternating 554/440Hz @ 0.625Hz	554Hz 0.8s	000101	1	8	19
42	Alternating 561/760Hz @ 0.83Hz (50	440Hz 0.88	100101	1	8	19
43	cycles/minute) Alternating 780/600Hz @ 0.96Hz	780Hz 0.52s	010101	1	8	19
	Alternating 800/1000Hz @ 2Hz	600Hz 0.52s 1000Hz 0.25s	110101	-		
44	Alternating	800Hz 0.25s 970Hz 0.25s	001101	5	24	19
45	970/800Hz @ 2Hz Alternating 800/1000Hz @ 0.875Hz	800Hz 0.25s 1000Hz 0.57s	101101	1	8	19
46	Alternating 2400/2900Hz @ 2Hz	800Hz 0.57s 2900Hz 0.25s	011101	53	24	19
47	Alternating 500/1200Hz @ 0.3Hz	2400Hz 0.25s 1200Hz	111101	57	24	19
48	Sweeping 560/1055Hz @ 0.18Hz	500Hz 3.34s 1055Hz		44	24	12
49	Sweeping 560/1055Hz @ 3.3Hz	560Hz 5.47s 1055Hz	000011	44	24	12
50	Sweeping 600/1250Hz @ 0.125Hz	560Hz 0.3s 1250Hz	100011	44	24	12
51	Sweeping 660/1200Hz @ 1Hz	600Hz 8s 1200Hz	010011	44	24	12
52	Sweeping	660Hz 1s 1000Hz	110011	64	24	12
53	800/1000Hz @ 1Hz Sweeping	800Hz 1s	001011	56	24	12
54	800/1000Hz @ 7Hz Sweeping	800Hz 0.14s	101011	57	24	12
55	800/1000Hz @ 50Hz Sweeping	800Hz 0.02s 2900Hz	011011	54	24	12
56	2400/2900Hz @ 7Hz Sweeping	2400Hz 0.14s 2900Hz	111011	57	24	12
57	2400/2900Hz @ 1Hz Sweeping	2400Hz 1s	000111	47	24	12
58	2400/2900Hz @ 50Hz Sweeping	2900Hz 2400Hz 0.02s	100111	54	24	12
59	2500/3000Hz @ 2Hz Sweeping	3000Hz 2500Hz 0.5s	010111	44	24	12
60	2500/3000Hz @ 7.7Hz Sweeping	3000Hz 2500Hz 0.13s	110111	44	24	12
61	800Hz Motor Siren	800Hz 1.6s	001111	44	24	12
62	1200Hz Motor Siren	1200Hz 2s	101111	44	24	12
63	2400Hz Motor Siren	2400Hz	011111	44	24	12
64	Simulated Bell	1450Hz 0.25s ← 0.69ms →	111111	44	21	12
•	·	a sealify	•		•	